


Installing the IMS2000 Controller

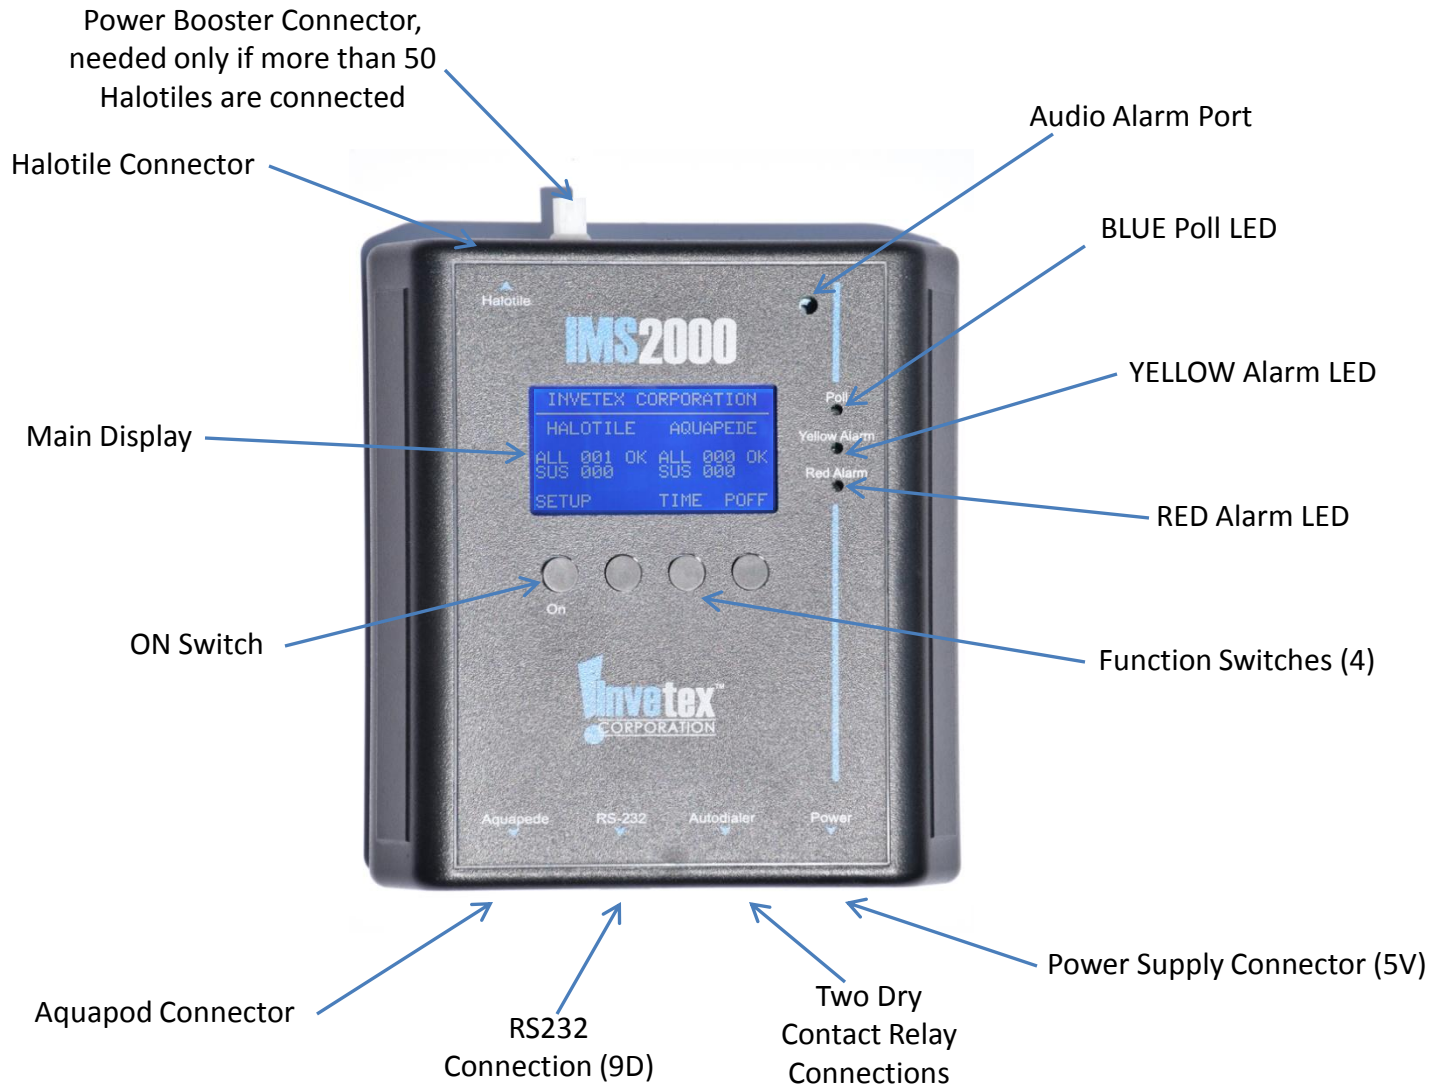


First Halotile Connection, end of the cable that is NOT marked

Power Booster Connector, only needed if more than 50 Halotiles are connected



IMS 2000, Top End View, Halotile Connections

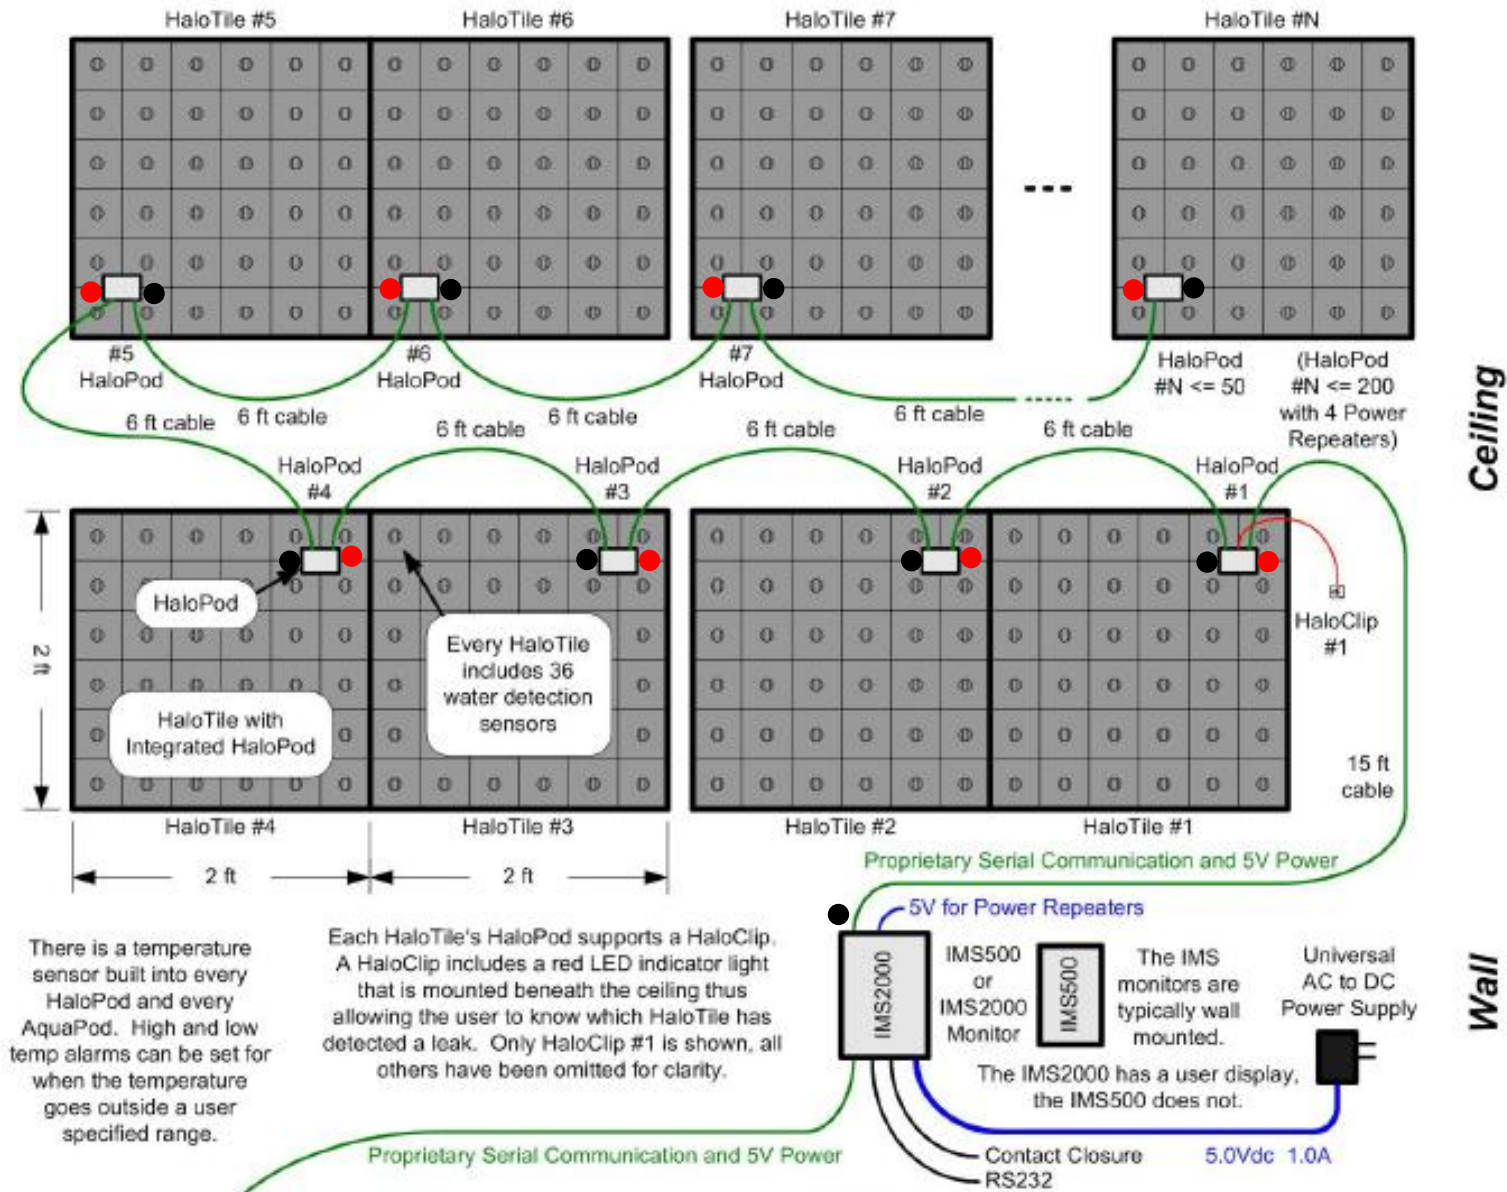

HaloTile Installation Block Diagram




First Aquapod Connection, end of the cable that is NOT marked

RS232 Connection (DB9)

Two Dry Contact Relay Connections

Power Supply Connector (5V)

IMS 2000, Bottom End View, Aquapod, RS232, Dry Contact Relays, and Power Connections

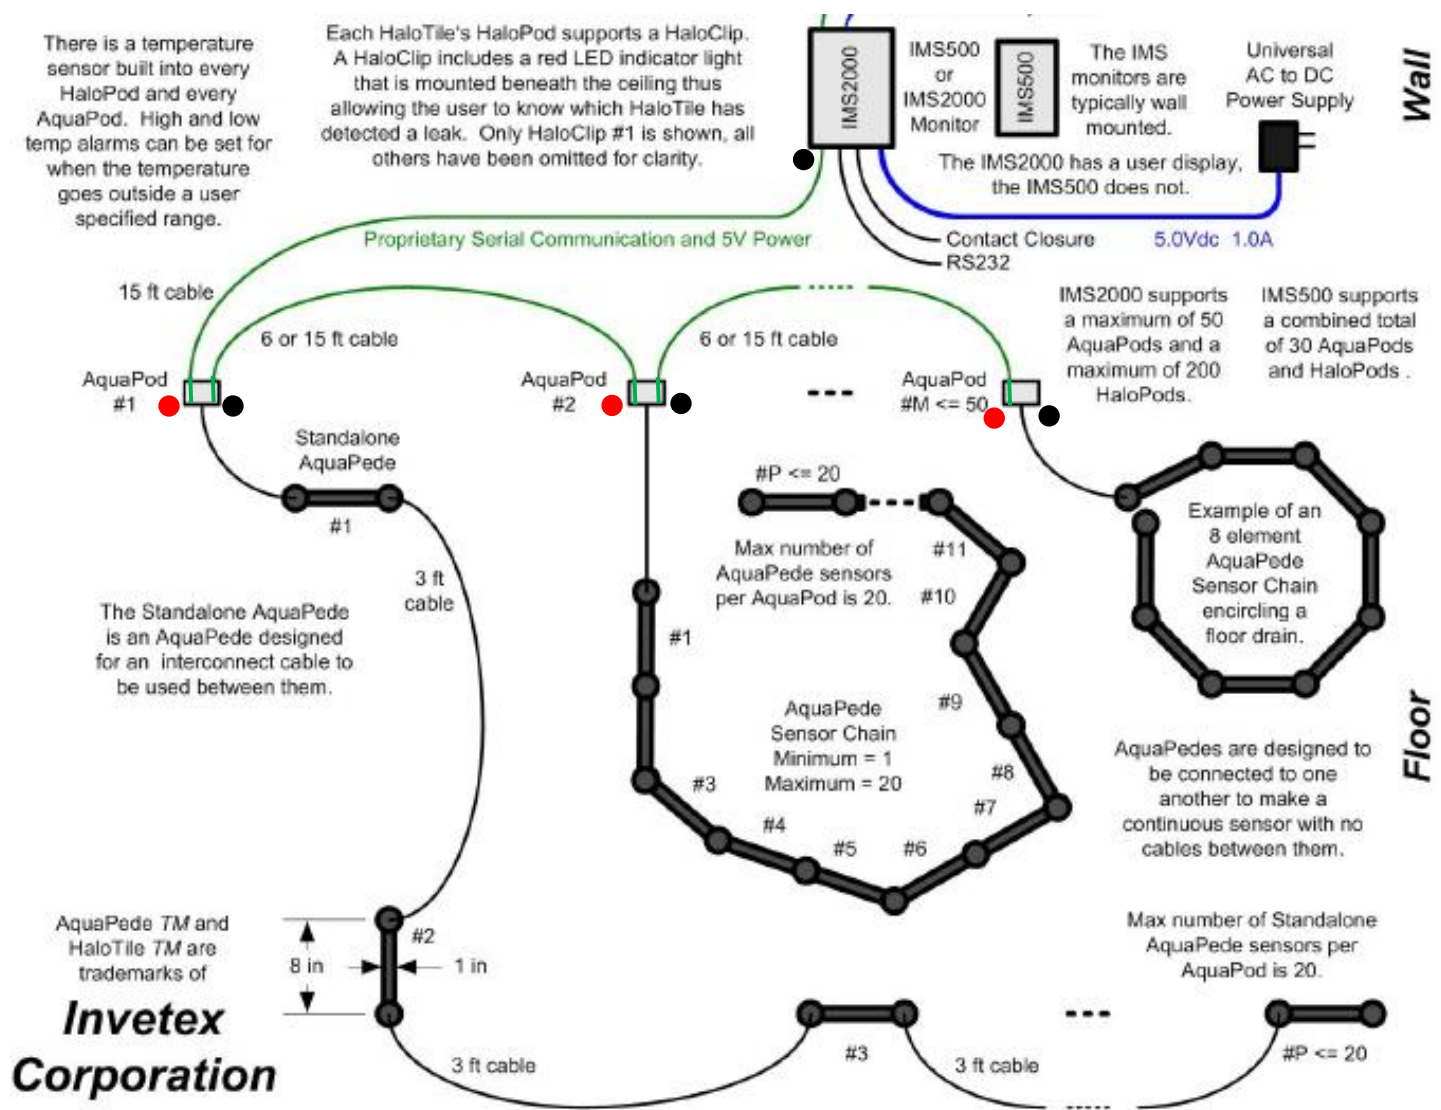

AquaPede™ and HaloTile™ are trademarks of
Invetex Corporation

Aquapod and Aquapede Block Diagram

Contact Closures

The “Autodialer” port on the bottom of the Master Controller Box is a standard RJ-11 connection that is designed to support two pairs of contact closures. One pair is designated as Red Alarm and the second as Yellow Alarm. These can be connected to alarm systems. The contacts are NC (normally closed) when the controller is not alarming. When the controller enters the alarm state, both sets of contacts open. (These contacts are low current and cannot directly drive shut off valves or other high power devices.) If you use Inventex™ color-coded connecting cables, the red and black lines are to the yellow alarm and the yellow and green lines are the red alarm contacts.



Any line connecting the Master Controller Box and an alarm system should be less than 75 feet, unless otherwise approved by your alarm service provider.