



Installing the Power Booster(S)

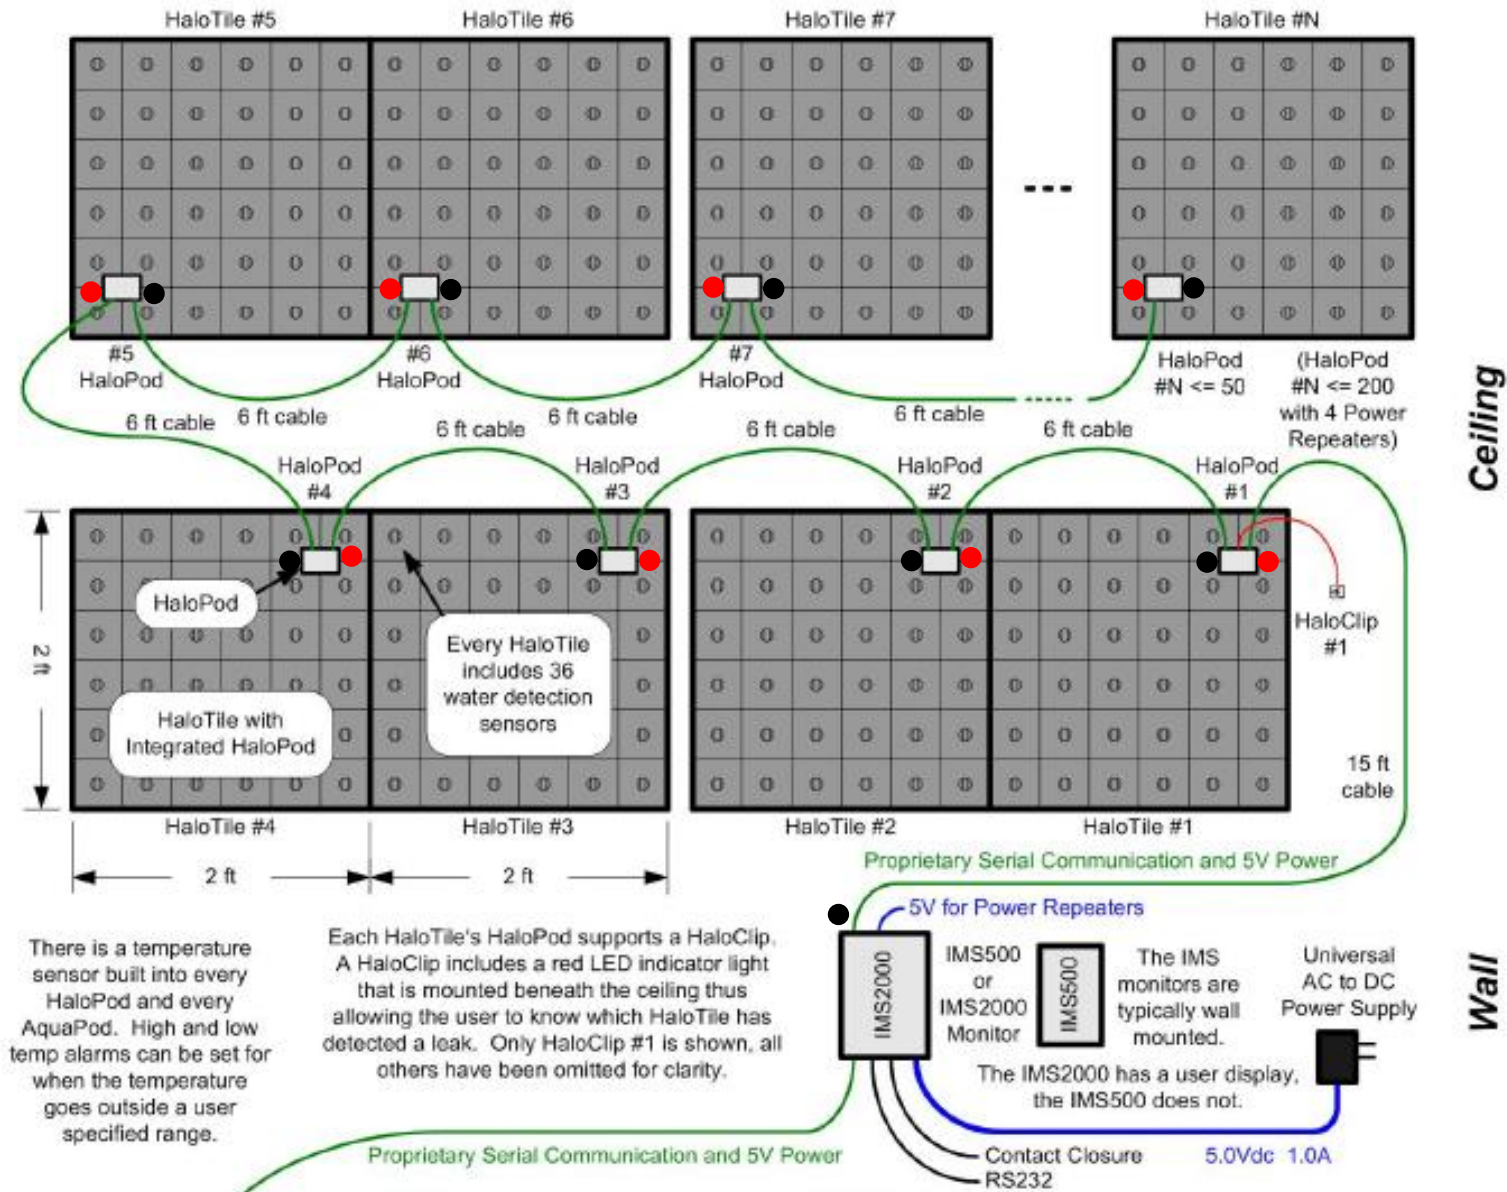

HaloTile Installation Block Diagram

Place between
Tile number 45 and
Tile number 46

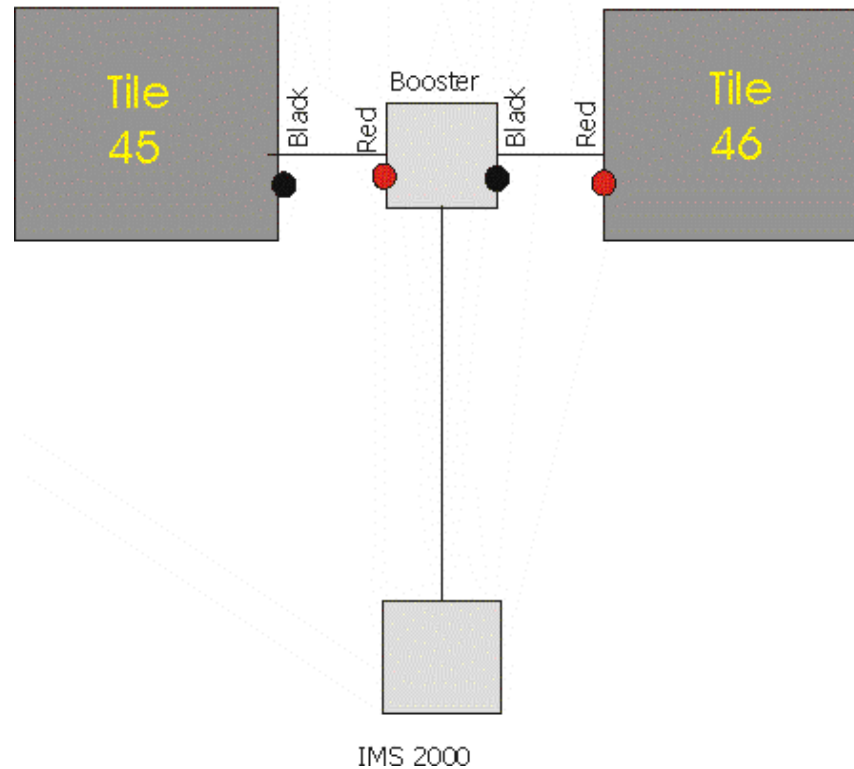

Power booster example. The Power Booster should be installed between sequential Halotiles between 45 and 55. The example above shows the power booster between Halotile 45 and 46.



9. Power booster cables, 25 feet, you can use up to four (4) per power booster if required, however, as short as possible works the best, so only use the minimum cables required.



9. Power booster cables have the same connectors as the power booster, so they can be plugged together to make longer versions. Four (4) maximum per power booster.

IMS2000 Controller



Power Booster Connector

Halotile Connector



Invetex Power Booster



Connect the Halotile white interface cable using the RED end, marked by the red dot.



The power booster cable from the IMS2000 or another power booster is plugged into the RED marked side of the power booster. The power booster cables are keyed, so they cannot be installed incorrectly.



7. This shows the booster cable correctly installed on the **RED** side of the power booster



9. Plug the Halotile end marked with BLACK into the BLACK marked side of the power booster, and plug the RED marked end of the white cable into the next Halotile.