


Aquapede Drain Installation




Aquapod and Aquapede Block Diagram

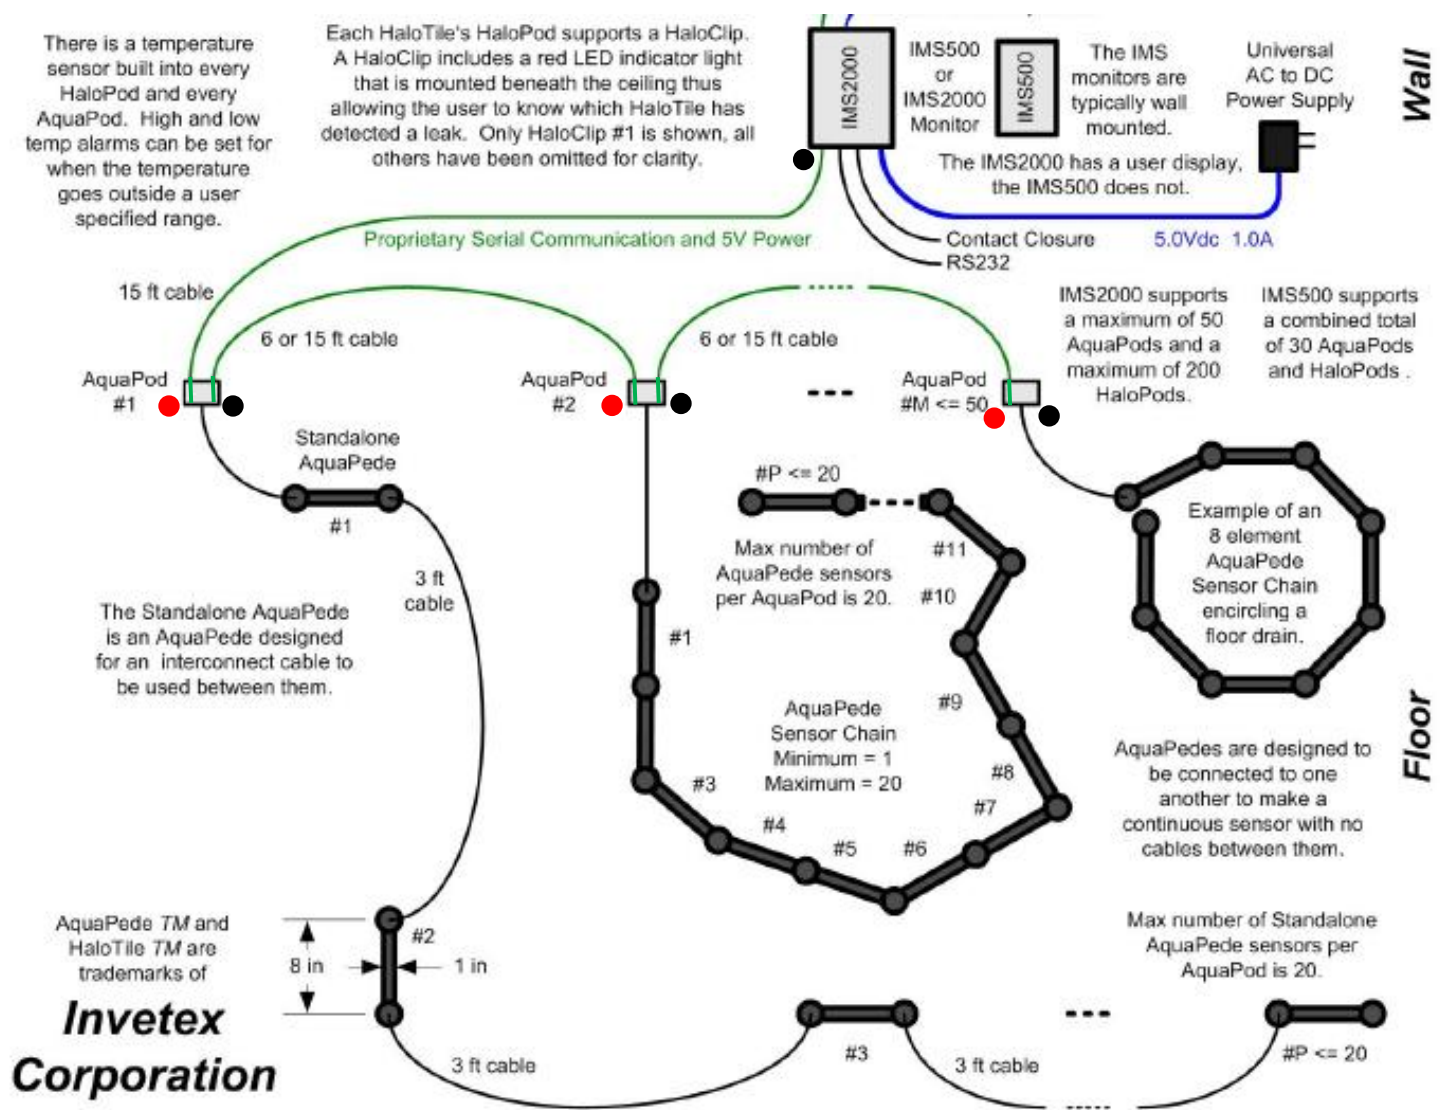


CAUTION! NEVER lift the drain assembly by one of the Aquapedes, damage could result.



Step 1: Remove the Aquapede Drain from shipping box holding flat and place on the floor over floor drain

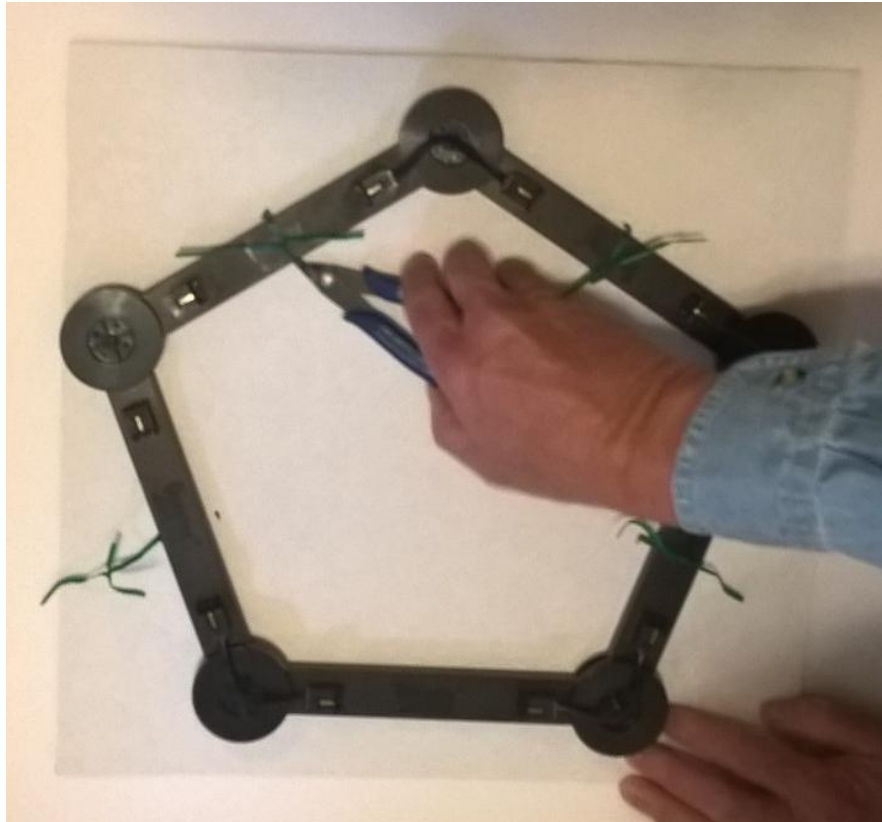


Step 2: Untie or cut the Green twist ties and completely remove all of the ties

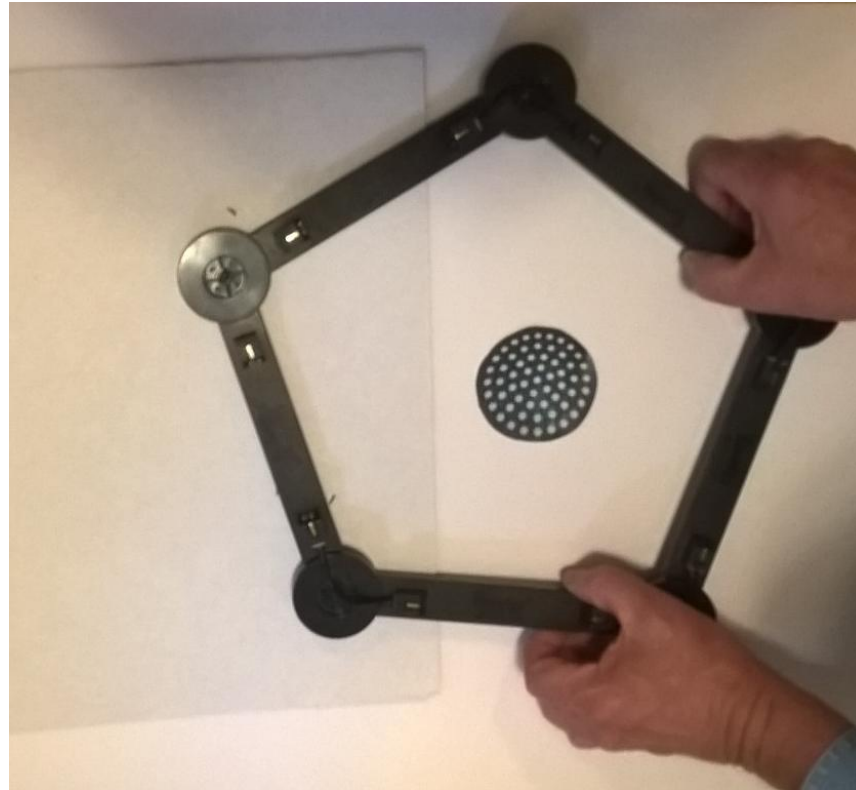

Step 3: Slide the Aquapede drain off of the cardboard carrier and move into position, centering over the floor drain

Step 4: Cable tie the black cable as close to the Aquapede Drain as possible to prevent future movement.

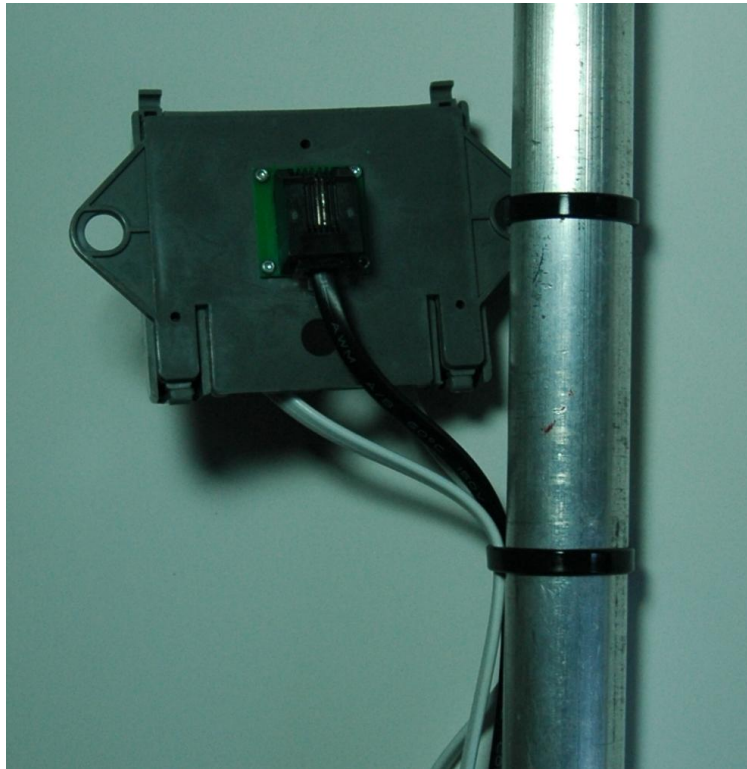

As shown above, plug the other end of the black cable into the back connector of the closest Aquapod.