



# Aquapod Installation

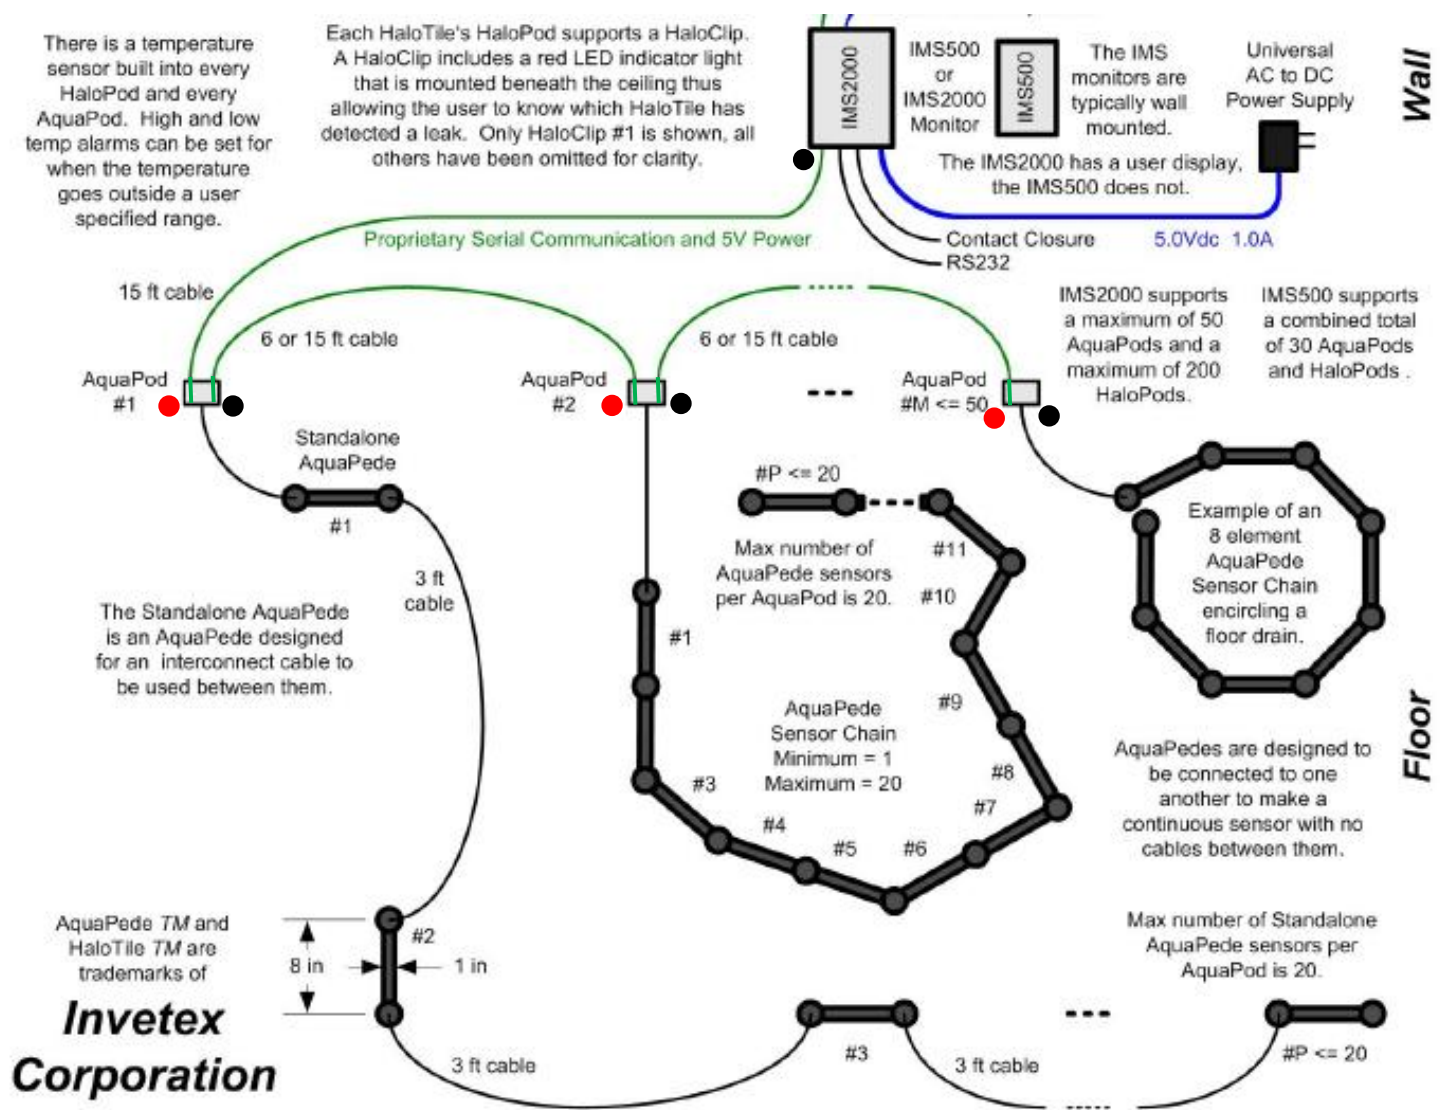

AquaPede™ and HaloTile™ are trademarks of  
**Invetex Corporation**

Aquapod and Aquapede Block Diagram

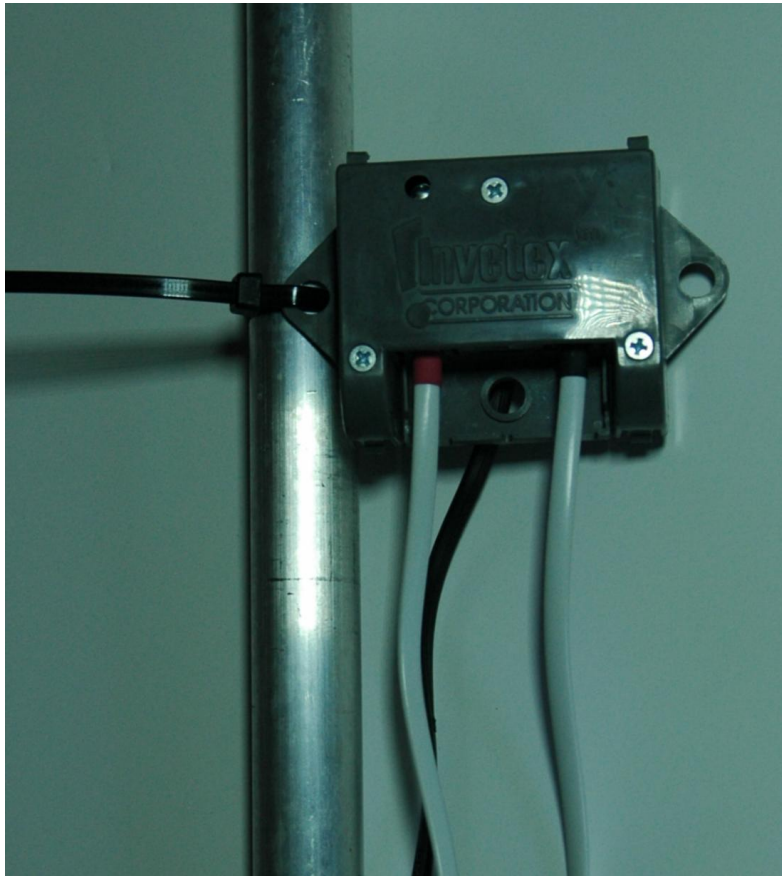


Front View



Back View

Step 1: Install the **RED** marked connector on the white cable from the IMS Controller or previous Aquapode into the left jack of the Aquapod. Install the **BLACK** marked connector on a new white cable into the right jack of the Aquapod, to daisy chain into the next Aquapod (unless this is the last Aquapod). Install the connector on the **BLACK** wire from the Aquapode into the connector on the back of the Aquapod. Then, secure the Aquapod to the post using a cable tie.

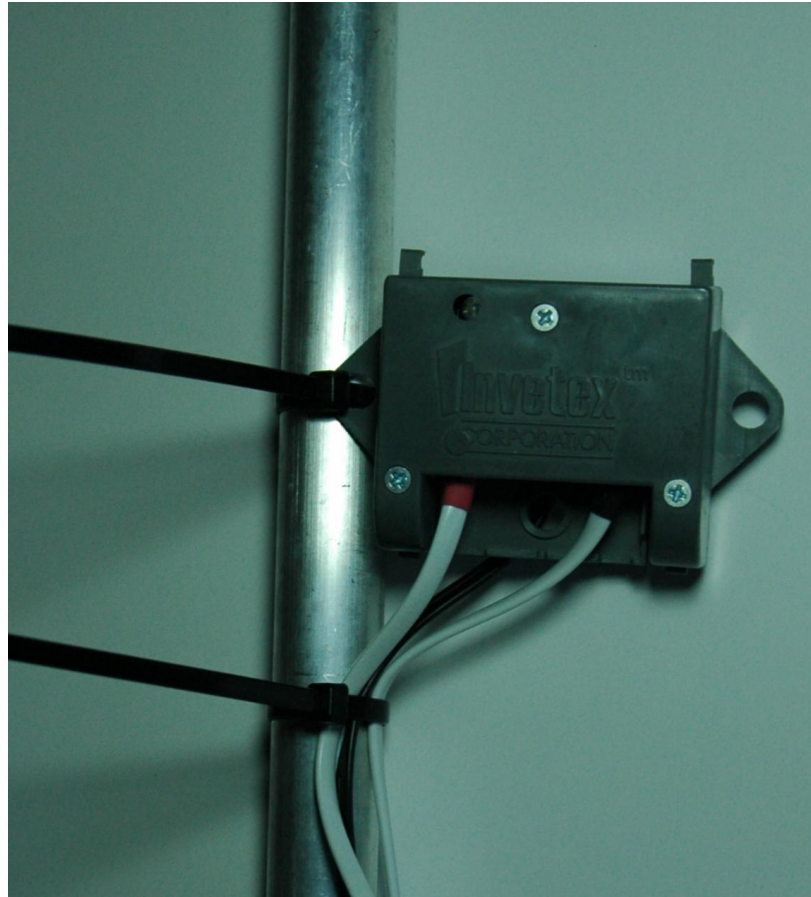


Front View

Step 2: Secure the bundle of three wires to the post using another cable tie as shown. (The last Aquapod in the chain will only have two wires.)



Front View

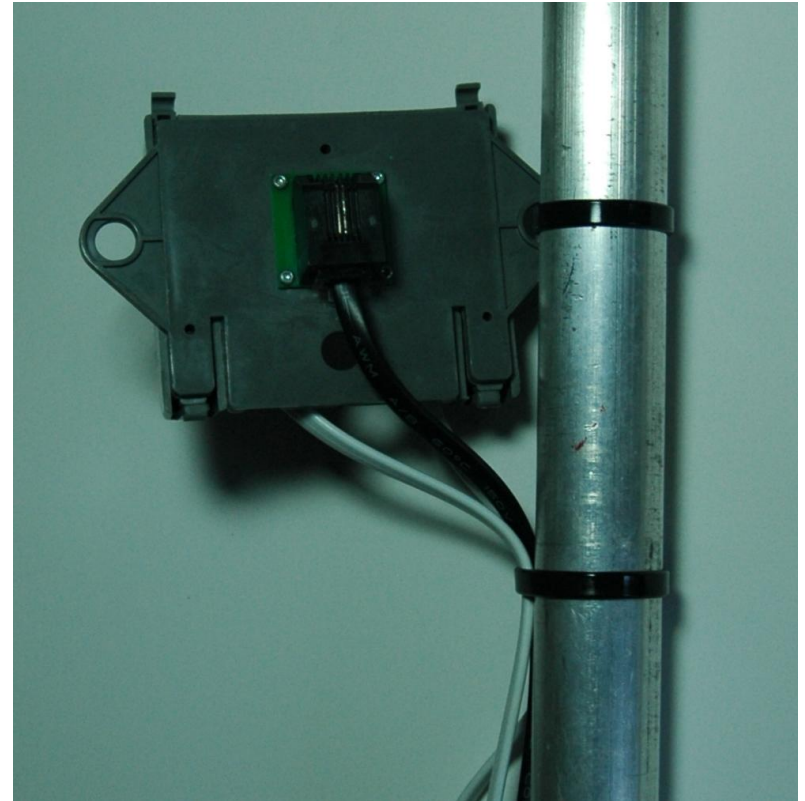

Back View

Step 3: Trim the cable ties as shown. Repeat the procedure until all Aquapods are installed